







 

 





 

 



 



 









 
 








Original	Recharge	Original	Recharge
	Power		Power
	Mode		D.Menu / Top
	Mute		Mute / Dimmer
	Band		TV/Radio /
	Vol+		Vol+
	APS		Text / Goto
	I<<		I<< / Preset-
	Sel		OK
	>>I		>>I / Preset+
	CLK		Sleep / Timer
	Vol-		Vol-
	ST		Sound / Title
	1/PAU		1
	2/INT		2
	3/RPT		3
	4/RDM		4
	5/↓		5
			6/↑
			7/*
			8/0
			9/#
			6
			7
			8
			9

