







 

 

 







 



 

 

 

 

 







 









 



 

 



















Original		Rechange		Original		Rechange	
	Power		Power		Eject		Eject / Surround
	1		1		Play/Pause		Play / Slow
	2		2		Slow I>		Shift + Play /
	3		3		I</Previous		I<< / Preset-
	4		4		>I/Next		>>I / Preset+
	5		5		Pause/Step		Pause / Step / Freeze
	6		6		EAX		D.Menu / Top
	7		7		*/Options		Setup / OPT /
	8		8		Display		Display / Media
	9		9		Return		Back / Return
	0		0		Start		Guide / EPG / -/-
	CMSS		Smart / List		Cancel		Exit / Cancel / Clear
	Mute		Mute / Dimmer		Up		Up
	Rec		Rec / Rec Mode		<<		<< / Tune-
	Vol-		Vol-		<<		Left
	Vol+		Vol+		OK/Select		OK
	Stop		Stop / Hold		>>		>> / Tune+





Original	Rechange	Original	Rechange
	>> Right		Right
	Down		Down

