



Original	Rechange	Original	Rechange
 Power	 Power	 Vol+	 Vol+
 Portal/Energy Saving	 Sleep / Timer	 Fav	 Fav / Marker / PC
 []/Ratio	 Picture / Format	 PR+/Page Up	 CH+ / Page+
 Input	 AV / Input / RDS	 Vol-	 Vol-
 TV	 TV/Radio /	 3D	 Zoom / Size
 1	 1	 PR-/Page Down	 CH- / Page-
 2	 2	 Mute	 Mute / Dimmer
 3	 3	 Settings	 Setup / OPT /
 4	 4	 Info/Home	 Info / Angle
 5	 5	 Q.Menu/3D	 Menu / Home
 6	 6	 Up	 Up
 7	 7	 Left	 Left
 8	 8	 OK	 OK
 9	 9	 Right	 Right
 List	 Smart / List	 Down	 Down
 0	 0	 Back	 Back / Return
 Q.View	 D.Menu / Top	 Guide	 Guide / EPG / -/-





	Original	Recharge	Original	Recharge
	Exit	Exit / Cancel / Clear		
	Red	Red / Netflix / Search		
	Green	Green / APP / Repeat		
	Yellow	Yellow / YouTube / Repeat		
	Blue	Blue / Prime Video / Random		
	Text	Text / Goto		
	T.Opt	Shift + Setup / OPT / Tools		
	Subtitle	Subtitle / EQ		
	Stop	Stop / Hold		
	Play	Play / Slow		
	Pause	Pause / Step / Freeze		
	<<	<< / Tune-		
	>>	>> / Tune+		
	Simplink	Display / Media		
	AD	Audio / Lang I/II		
	Rec	Rec / Rec Mode		
	My APPS	Shift + Green / APP / Repeat		

