



Original	Recharge
Standby	Power
Mute	Mute / Dimmer
EPG	Guide / EPG / /--
Info	Info / Angle
TTX	Text / Goto
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Menu	Menu / Home
Up / CH+	CH+ / Page+
Up / CH+	Up
Exit	Exit / Cancel / Clear
Left / Vol-	Vol-
Left / Vol-	Left
OK	OK
Right / Vol+	Vol+
Right / Vol+	Right
Favourite	Fav / Marker / PC

Original	Recharge
Down / CH-	CH- / Page-
Down / CH-	Down
TV/Radio	TV/Radio /
1	1
2	2
3	3
Recall	Back / Return
4	4
5	5
6	6
Goto	Shift + Text /
7	7
8	8
9	9
0	0
Rev	<< / Tune-
Fwd	>> / Tune+





	Original	Recharge	
	Prev	PRESET- << / Preset-	
	Next	PRESET+ >> / Preset+	
	Play	SLOW Play / Slow	
	Pause	STEP-FREEZE Pause / Step / Freeze	
	Stop	HOLD Stop / Hold	
	Repeat	SHIFT + APP Shift + Green / APP / REPEAT	
	Red	NETFLIX Red / Netflix / SEARCH	
	Green	APP Green / APP / Repeat	
	Yellow	YouTube Yellow / YouTube / REPEAT A-B	
	Blue	Prime Video Blue / Prime Video / RANDOM	

	Original	Recharge

