







 

 

 

 





 

 















Original		Rechange	
	Power		Power
	Sleep		Sleep / Timer
	Mute		Mute / Dimmer
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	Audio/Lang		Audio / Lang I/II
	4		4
	5		5
	6		6
	Tv/Radio		TV/Radio /
	7		7
	8		8
	9		9
	Exit		Exit / Cancel / Clear
	CH.List		Smart / List

Original		Rechange	
	0		0
	Back		Back / Return
	Menu		Menu / Home
	CH-		CH- / Page-
	Up		Up
	CH+		CH+ / Page+
	Left		Left
	Enter		OK
	Right		Right
	Vol-		Vol-
	Down		Down
	Vol+		Vol+
	Setup		Setup / OPT /
	Play/Timeshift		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Eject		Eject / Surround



