


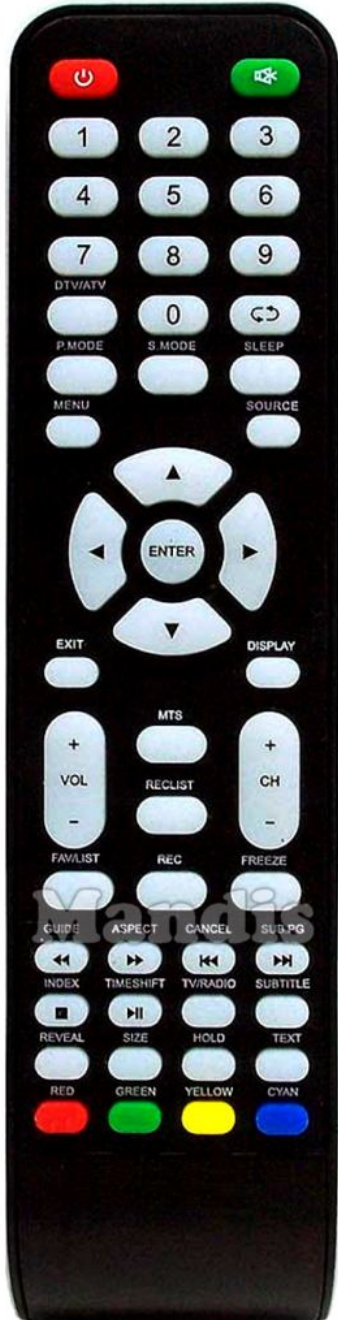

Original		Rechange		Original		Rechange	
	Power		Power		Menu		Menu / Home
	Mute		Mute / Dimmer		Source		AV / Input / RDS
	1		1		Up		Up
	2		2		Left		Left
	3		3		Enter		OK
	4		4		Right		Right
	5		5		Down		Down
	6		6		Exit		Exit / Cancel / Clear
	7		7		Display		Display / Media
	8		8		Vol+		Vol+
	9		9		Vol-		Vol-
	0		0		MTS		Info / Angle
	DTV/ATV		D.Menu / Top		Rec List		Smart / List
	Recall		Back / Return		CH+		CH+ / Page+
	P.Mode		Picture / Format		CH-		CH- / Page-
	S.Mode		Sound / Title		FAV/List		Fav / Marker / PC
	Sleep		Sleep / Timer		Rec		Rec / Rec Mode





Original	Recharge	Original	Recharge
Freeze	Pause / Step / Freeze	Green	Green / APP / Repeat
Guide	Guide / EPG / -/-	Yellow	Yellow / YouTube / Repeat
<<	<< / Tune-	Cyan	Blue / Prime Video / Random
>> / Aspect	>> / Tune+		
>> / Aspect	Shift + Picture / Format		
I<< / Cancel	I<< / Preset-		
I<< / Cancel	Shift + Exit / Cancel / Clear		
>>I / Sub.PG	>>I / Preset+		
Stop / Index	Stop / Hold		
Play/Pause / Timeshift	Play / Slow		
Tv/Radio	TV/Radio /		
Subtitle	Subtitle / EQ		
Reveal	Eject / Surround		
Size	Zoom / Size		
Hold	Shift + Stop /		
Text	Text / Goto		
Red	Red / Netflix / Search		







Original	Rechange	Original	Rechange
 Power	 Power	 Menu	 Menu / Home
 Mute	 Mute / Dimmer	 Source	 AV / Input / RDS
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 Enter	 OK
 4	 4	 Right	 Right
 5	 5	 Down	 Down
 6	 6	 Exit	 Exit / Cancel / Clear
 7	 7	 Display	 Display / Media
 8	 8	 Vol+	 Vol+
 9	 9	 Vol-	 Vol-
 0	 0	 MTS	 Info / Angle
 DTV/ATV	 D.Menu / Top	 Rec List	 Smart / List
 Recall	 Back / Return	 CH+	 CH+ / Page+
 P.Mode	 Picture / Format	 CH-	 CH- / Page-
 S.Mode	 Sound / Title	 FAV/List	 Fav / Marker / PC
 Sleep	 Sleep / Timer	 Rec	 Rec / Rec Mode



