



Original	Rechange	Original	Rechange
Power	Power	Up	Up
16:9 / Wide	Picture / Format	Left	Left
Mute	Mute / Dimmer	OK	OK
1	1	Right	Right
2	2	Down	Down
3	3	Vol +	Vol+
4	4	Menu	Menu / Home
5	5	CH +	CH+ / Page+
6	6	Vol -	Vol-
7	7	Source	AV / Input / RDS
8	8	CH -	CH- / Page-
9	9	Info	Info / Angle
0	0	Sleep	Sleep / Timer
F1	Exit / Cancel / Clear	Recall	Back / Return
[:≡]	D.Menu / Top	L / R	Eject / Surround
Smart S	Sound / Title	Index / Play	Play / Slow
Smart P	Shift + Picture / Format	Index / Play	Display / Media

Original	Rechange	Original	Rechange
Up	Up	Up	Up
Left	Left	Left	Left
OK	OK	OK	OK
Right	Right	Right	Right
Down	Down	Down	Down
Vol +	Vol+	Vol +	Vol+
Menu	Menu / Home	CH +	CH+ / Page+
CH +	CH+ / Page+	Vol -	Vol-
Vol -	Vol-	Source	AV / Input / RDS
CH -	CH- / Page-	CH -	CH- / Page-
Info	Info / Angle	Info	Info / Angle
Sleep	Sleep / Timer	Sleep	Sleep / Timer
Recall	Back / Return	Recall	Back / Return
L / R	Eject / Surround	L / R	Eject / Surround
Index / Play	Play / Slow	Index / Play	Play / Slow
Index / Play	Display / Media	Index / Play	Display / Media





Original		Recharge		Original		Recharge	
	Zoom / Pause		Zoom / Size		Green / Subtitle		Green / APP / Repeat
	Zoom / Pause		Pause / Step / Freeze		Yellow / Fav		Fav / Marker / PC
	Reveal / Stop		Stop / Hold		Yellow / Fav		Yellow / YouTube / Repeat
	Reveal / Stop		Setup / OPT /		Blue / EPG		Guide / EPG / -/--
	TTX		Text / Goto		Blue / EPG		Blue / Prime Video / Random
	Hold / I<<		I<< / Preset-				
	Hold / I<<		Shift + Stop /				
	List / >>I		>>I / Preset+				
	List / >>I		Smart / List				
	Language / <<		<< / Tune-				
	Language / <<		Audio / Lang I/II				
	Save / >>		>> / Tune+				
	Save / >>		Shift + Rec / Rec Mode				
	Red / Radio / Rec		Rec / Rec Mode				
	Red / Radio		Red / Netflix / Search				
	Red / Radio / Rec		TV/Radio /				
	Green / Subtitle		Subtitle / EQ				

