



























 

 













 













 









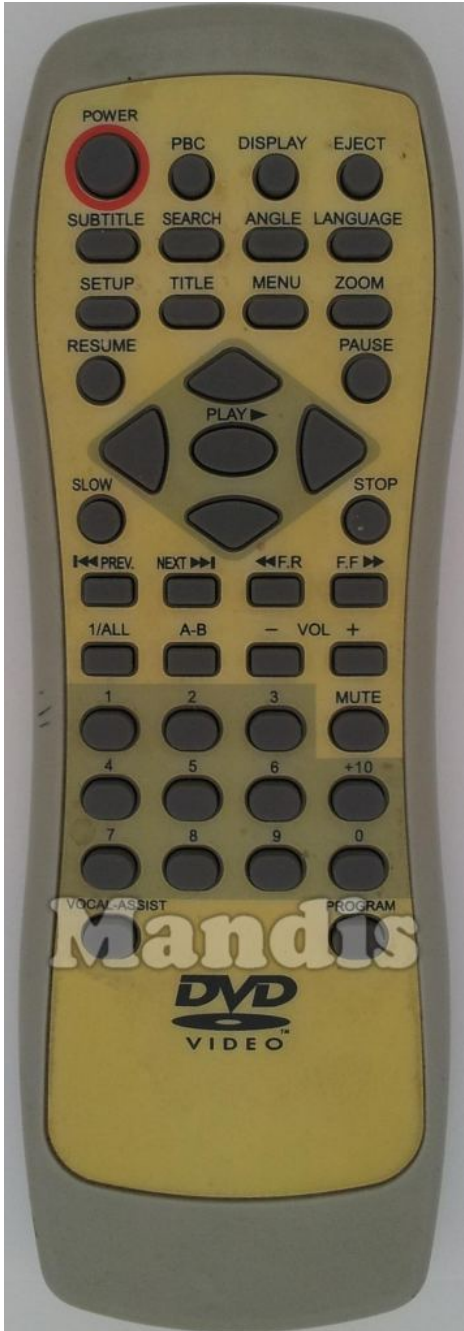




Original	Rechange	Original	Rechange
 Power	 Power	 Play	 Play / Slow
 PBC	 Text / Goto	 Right	 Right
 Display	 Display / Media	 Slow	 Shift + Play /
 Eject	 Eject / Surround	 Down	 Down
 Subtitle	 Subtitle / EQ	 Stop	 Stop / Hold
 Search	 Red / Netflix / Search	 I<<	 I<< / Preset-
 Angle	 Info / Angle	 >>I	 >>I / Preset+
 Language	 Audio / Lang I/II	 <<	 << / Tune-
 Setup	 Setup / OPT /	 >>	 >> / Tune+
 Title	 Sound / Title	 1/All	 Smart / List
 Menu	 Menu / Home	 A-B	 Yellow / YouTube / Repeat
 Zoom	 Zoom / Size	 Vol-	 Vol-
 Resume	 D.Menu / Top	 Vol+	 Vol+
 Up	 Up	 1	 1
 Pause	 Pause / Step / Freeze	 2	 2
 Left	 Left	 3	 3
 OK	 OK	 Mute	 Mute / Dimmer





Original	Recharge	Original	Recharge
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
+10	+10	GUIDE EPG	Guide / EPG / -/--
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
0	0	HDMI - BAT 0	0
VOCAL-ASSIST	Vocal-Assist	RDS AV INPUT	AV / Input / RDS
PROGRAM	Program	PROGRAM TV/RADIO	TV/Radio /

Original	Recharge	Original	Recharge

