



Original		Rechange		Original		Rechange	
	Power		Power		Text		Text / Goto
	Mute		Mute / Dimmer		Guide		Guide / EPG / -/-
	V-Format		Picture / Format		Exit		Exit / Cancel / Clear
	Sleep		Sleep / Timer		Up		Up
	FAV		Fav / Marker / PC		Page Down		Shift + CH- /
	TV / Radio		TV/Radio /		Left		Left
	List		Smart / List		OK		OK
	SAT		Shift + 0		Right		Right
	Zoom		Zoom / Size		Page Up		Shift + CH+ /
	Subtitle		Subtitle / EQ		Down		Down
	Vol +		Vol+		Red		Red / Netflix / Search
	Info		Info / Angle		Green		Green / APP / Repeat
	CH+		CH+ / Page+		Yellow		Yellow / YouTube / Repeat
	Vol -		Vol-		Blue		Blue / Prime Video / Random
	Recall		Back / Return		1		1
	CH-		CH- / Page-		2		2
	Menu		Menu / Home		3		3



