























 



 



 











 

 

 




 
 



 






 





Original	Recharge	Original	Recharge
 Power	 Power	 Menu	 Menu / Home
 Stop	 Stop / Hold	 Info	 Info / Angle
 Play/Pause	 Play / Slow	 Up	 Up
 <<	 << / Tune-	 Left	 Left
 >>	 >> / Tune+	 OK	 OK
 Rec	 Rec / Rec Mode	 Right	 Right
 Audio	 Audio / Lang I/II	 Exit	 Exit / Cancel / Clear
 I<<	 I<< / Preset-	 Down	 Down
 >>I	 >>I / Preset+	 Back	 Back / Return
 Red / TTX	 Red / Netflix / Search	 Vol+	 Vol+
 Red / TTX	 Text / Goto	 EPG	 Guide / EPG / -/-
 Green / SUB	 Green / APP / Repeat	 CH+ / Page+	 CH+ / Page+
 Green / SUB	 Subtitle / EQ	 Vol-	 Vol-
 Yellow / Sleep	 Yellow / YouTube / Repeat	 List	 Smart / List
 Yellow / Sleep	 Sleep / Timer	 CH- / Page-	 CH- / Page-
 Blue / Timer	 Blue / Prime Video / Random	 1	 1
 Blue / Timer	 Shift + Sleep / Timer	 2	 2





Original		Recharge		Original		Recharge	
3	3	CD - STB 3	3				
4	4	VIDEO 4	4				
5	5	TAPE 5	5				
6	6	TUNER 6	6				
7	7	AUX - HDD 7	7				
8	8	USB 8	8				
9	9	BLUETOOTH 9	9				
TV-RADIO	TV-Radio	PROGRAM TV/RADIO	TV/Radio /				
0	0	HDMI - BAT 0	0				
FAV	Fav	PC FAV MARKER	Fav / Marker / PC				

