



Original		Rechange		Original		Rechange	
	Power		Power		Vol+		Vol+
	Mute		Mute / Dimmer		CH-		CH- / Page-
	1		1		I-II		Audio / Lang I/II
	2		2		Vol-		Vol-
	3		3		Up		Up
	4		4		Left		Left
	5		5		OK/Select		OK
	6		6		Right		Right
	7		7		Menu		Menu / Home
	8		8		Down		Down
	9		9		TV/DTV		TV/Radio /
	AV/Source		AV / Input / RDS		Red		Red / Netflix / Search
	0		0		Green		Green / APP / Repeat
	Exit		Exit / Cancel / Clear		Yellow		Yellow / YouTube / Repeat
	-/--		-/--		Blue		Blue / Prime Video / Random
	CH+		CH+ / Page+		[≡]/Text		Text / Goto
	[i]/Info		Info / Angle		[≡o]		Sleep / Timer





Original		Rechange		Original		Rechange	
	[≡+]/[X]		<< / Tune-				
	[≡x]/[··]		>> / Tune+				
	[.]/[*]		I<< / Preset-				
	[≡◆]/[+]/Wide		Picture / Format				
	[≡?]		>>I / Preset+				
	[≡i]/Guide		Guide / EPG / -/--				
	P<P/SWAP		Fav / Marker / PC				
	PP		Back / Return				

