






Original		Rechange		Original		Rechange	
	OFF	 + 	Shift + Power		Tuning-		<< / Tune-
	ON		Power		Input VCR-2		9
	Standard		Red / Netflix / Search		Input V.AUX		8
	Cinema		Green / APP / Repeat		Input CDR/TAPE		5
	Music		Yellow / YouTube / Repeat		Channel+ /		>> / Preset+
	DSP Simulation		Blue / Prime Video / Random		Channel+ /		CH+ / Page+
	Direct	 + 	Shift + Red / Netflix /		Input AUX		7
	Stereo	 + 	Shift + Green / APP /		Channel- / Preset-		<< / Preset-
	Virtual Surround	 + 	Shift + Yellow / YouTube /		Channel- / Preset-		CH- / Page-
	5CH/7CH Stereo	 + 	Shift + Blue / Prime		Mode		Play / Slow
	Input PHONO		0		Memory		Pause / Step / Freeze
	Input CD		3		Band		Stop / Hold
	Input TUNER		6		Shift		Rec / Rec Mode
	Tuning+		>> / Tune+		Vol+		Vol+
	Input DVD/VDP		2		Vol-		Vol-
	Input TV/DBS		1		Muting		Mute / Dimmer
	Input VCR		4		Setup		Setup / OPT /





Original	Recharge
 Up	 Up
 Surround	 Eject / Surround
 Left	 Left
 Enter	 OK
 Right	 Right
 Status / Display	 Display / Media
 Down	 Down
 Surround Back	 Back / Return
 Test Tone	 Text / Goto
 Video Select	 Picture / Format
 Dimmer	 Shift + Dimmer / Mute
 Speaker	 Sound / Title
 Input Mode	 Shift + 1
 Input Analog	 Shift + 2
 Input Ext.In	 Shift + 3

Original	Recharge

