

Original	Recharge	Original	Recharge
Power ON/Off		Power	
CD Play		Play / Slow	
CD Pause		Pause / Step / Freeze	
Stop		Stop / Hold	
CD Rewind		<< / Tune-	
CD F.FWD		>> / Tune+	
Prev./Prog-		I<< / Preset-	
Next/Prog+		>>I / Preset+	
Tape 2 Pre./eq		Subtitle / EQ	
Tape 1 Hall/Ats		Eject / Surround	
Sleep		Sleep / Timer	
Program		TV/Radio /	
CD/Theater		Setup / OPT /	
Input/Source		AV / Input / RDS	
Mode		Menu / Home	
Tape 1 Preset		Up	
Preset Pause		OK	
Woofer/Speed		Right	
Volume+		Vol+	
Funct./Direct		Smart / List	
Vol Rs+/S.Mode		CH+ / Page+	
Volume-		Vol-	
Display		Display / Media	
Vol Rs-/Effect		CH- / Page-	
Pr 1		1	
Pr 2		2	
Pr 3		3	
Pr 4		4	
Pr 5		5	
Pr 6		6	
Repeat		Green / APP / Repeat	
CD Random		Blue / Prime Video / Random	
Tape 1 Play		Shift + Play /	
Tape 1 Stop		Shift + Stop /	

Hold



Power **DIMMER MUTE** **SHIFT**

TV **DVD** **SAT** **AUX**
 SLOW STEP-FREEZE HOLD REC MODE

Play **Pause** **Stop** **Red Dot**
 TUNE- TUNE+ PRESET- PRESET+

Left Arrow **Right Arrow** **Double Left Arrow** **Double Right Arrow**
 TITLE LANG III EQ SURROUND

SOUND **AUDIO** **SUBTITLE** **Up Arrow**
 FORMAT SIZE TIMER PROGRAM

PICTURE **ZOOM** **SLEEP** **TV RADIO**
 TOP MENU OPT-TOOLS GOTO RDS

D.MENU **SETUP** **TEXT** **AV INPUT**

HOME **ANGLE**
MENU **INFO**

Left Arrow **OK** **Right Arrow**
Up Arrow **Down Arrow**

CLEAR **RETURN**
EXIT **BACK**

CANCEL **LIST** **+**
VOL **SMART** **CH PAGE**
- **MEDIA** **-**
DISPLAY

TV **DVD** **CD-STE**
1 **2** **3**
VIDEO **TAPE** **TUNER**
4 **5** **6**

AUX-HDD **USB** **BLUETOOTH**
7 **8** **9**
TV **HDMI-SAT** **PC**
GUIDE **0** **FAV MARKER**
EPG

NETFLIX **APP** **YouTube** **Prime Video**

SEARCH **REPEAT** **REPEAT A-B** **RANDOM**

Mandis
 shop
 www.mandis.tv