



Original		Rechange		Original		Rechange	
	Power		Power		Sleep		Sleep / Timer
	Mute		Mute / Dimmer		Input		AV / Input / RDS
	1		1		Up		Up
	2		2		Left		Left
	3		3		OK		OK
	4		4		Right		Right
	5		5		Down		Down
	6		6		Menu		Menu / Home
	7		7		Exit		Exit / Cancel / Clear
	8		8		FAV		Fav / Marker / PC
	9		9		Vol +		Vol+
	Info		Info / Angle		ADD / DEL		Shift + Back / Return
	0		0		PR +		CH+ / Page+
	Recall		Back / Return		Vol -		Vol-
	PMode		Picture / Format		Cancel		Shift + Exit / Cancel / Clear
	I / II		Audio / Lang I/II		PR -		CH- / Page-
	EPG		Guide / EPG / -/--		Red		Red / Netflix / Search



