

 
















 





Original	Recharge	Original	Recharge
 Power	 Power		
 Mute	 Mute		
 Source	 AV		
 Vol+	 Vol +		
 Vol-	 Vol -		
 SUB+	 Ch +		
 SUB-	 Ch -		
 TRE+	 Up		
 TRE-	 Down		
 BASS+	 Right		
 BASS-	 Left		
 Reset	 Back		
 SRS On	 Smart		
 SRS Off	 Media		

