















 

 































 




 
















Original	Rechange	Original	Rechange
	Power		Power
	Open/Close		Eject / Surround
	N/P		D.Menu / Top
	1		1
	2		2
	3		3
	Video		Shift + 4
	4		4
	5		5
	6		6
	Random		Blue / Prime Video / Random
	7		7
	8		8
	9		9
	Default		Info / Angle
	Goto		Text / Goto
	0		0
	10+		Guide / EPG / -/--
	Zoom		Zoom / Size
	Menu		Menu / Home
	PBC		TV/Radio /
	Setup		Setup / OPT /
	OSD		Display / Media
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Title		Sound / Title
	L/R		Picture / Format
	Prog		Shift + TV/Radio / Program
	Clear		Exit / Cancel / Clear
	Mark		Fav / Marker / PC
	<<		<< / Tune-





Original	Recharge
	Play / Slow
	Pause / Step / Freeze
	Fast Rewind / Preset-
	Fast Forward / Tune+
	Stop / Hold
	Still / Preset+
	Audio / Lang I/II
	+ Shift + Info / Angle
	Subtitle / EQ
	Volume Up
	Back / Return
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Volume Down
	+ Shift + Pause / Step /
	CH+ / Page+
	CH- / Page-

Original	Recharge
	Mute / Dimmer

