






















 






























 





 











Original	Recharge	Original	Recharge
 Power	 Power	 Netflix	 Shift + Red / Netflix /
 Mute	 Mute / Dimmer	 Menu	 Menu / Home
 1	 1	 Up	 Up
 2	 2	 Source	 AV / Input / RDS
 3	 3	 Left	 Left
 4	 4	 OK	 OK
 5	 5	 Right	 Right
 6	 6	 Return	 Shift + Back / Return
 7	 7	 Down	 Down
 8	 8	 Exit	 Exit / Cancel / Clear
 9	 9	 Vol+	 Vol+
 CH.List	 Smart / List	 Info	 Info / Angle
 0	 0	 CH+	 CH+ / Page+
 Recall	 Back / Return	 Vol-	 Vol-
 YouTube	 Shift + Yellow / YouTube /	 EPG	 Guide / EPG / -/--
 Toon Goggles	 Shift + Green / APP /	 CH-	 CH- / Page-
 Foxxum	 Shift + Blue / Prime Video /	 I<< / TTX	 I<< / Preset-

Random



