



Original	Rechange
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
FAV	Fav / Marker / PC
0	0
ALT	Display / Media
EPG	Guide / EPG / -/--
Info	Info / Angle
Menu	Menu / Home

Original	Rechange
Up	Up
CH+	CH+ / Page+
Exit	Exit / Cancel / Clear
Left	Left
OK	OK
Right	Right
Vol+	Vol+
CH-	CH- / Page-
Down	Down
List	Smart / List
Vol-	Vol-
Sub	Subtitle / EQ
Red	Red / Netflix / Search
Lang	Shift + Audio / Lang I/II
Blue	Blue / Prime Video / Random
Text	Text / Goto
Green	Green / APP / Repeat



