



 






Original	Rechange
 Standby	 Power
 OSD	 Display / Media
 Mute	 Mute / Dimmer
 Open/Close	 Eject / Surround
 Video	 Shift + 4
 1	 1
 2	 2
 3	 3
 Return	 Back / Return
 4	 4
 5	 5
 6	 6
 Default	 Smart / List
 7	 7
 8	 8
 9	 9
 Clear	 Exit / Cancel / Clear




 


 

 

 

 

 

 

 







 

 
 
Original	Rechange
 Goto	 Text / Goto
 0	 0
 10+	 Guide / EPG / -/--
 Prog	 TV/Radio /
 Mark	 Fav / Marker / PC
 Menu/PBC	 Menu / Home
 Title	 Sound / Title
 N/P	 Red / Netflix / Search
 Up	 Up
 Setup	 Setup / OPT /
 Left	 Left
 Enter	 OK
 Right	 Right
 Play	 Play / Slow
 Down	 Down
 Zoom	 Zoom / Size
 I<<	 I<< / Preset-





**Original**

**Recharge**

	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Pause		Pause / Step / Freeze
	Angle		Info / Angle
	Lang/L/R		Audio / Lang I/II
	Sub-T		Subtitle / EQ
	Stop		Stop / Hold
	Random		Blue / Prime Video / Random
	A-B		Yellow / YouTube / Repeat
	Repeat		Green / APP / Repeat
	Step		Shift + Pause / Step /
	Slow		Shift + Play /
	Vol-		Vol-
	Vol+		Vol+

**Original**

**Recharge**