



Original	Recharge	Original	Recharge
Standby	Power	Display	Display / Media
Mute	Mute / Dimmer	Tv/Radio	TV/Radio /
1	1	Up	Up
2	2	Left	Left
3	3	OK	OK
4	4	Right	Right
5	5	Menu	Menu / Home
6	6	Down	Down
7	7	Exit	Exit / Cancel / Clear
8	8	FAV	Fav / Marker / PC
9	9	Vol+	Vol+
0	0	Vol-	Vol-
Aspect	Shift + Picture / Format	Rec	Rec / Rec Mode
Recall	Back / Return	CH+	CH+ / Page+
TVG	Guide / EPG / -/--	CH-	CH- / Page-
Subtitle	Subtitle / EQ	Media	Shift + Display / Media
Audio	Audio / Lang I/II	Source	AV / Input / RDS





Original	Recharge
P.Mode	Picture / Format
S.Mode	Sound / Title
Sleep	Sleep / Timer
Text	Text / Goto
Hold	Shift + Stop /
Reveal	D.Menu / Top
Subpage	Setup / OPT /
Play	Play / Slow
Pause/Timeshift	Pause / Step / Freeze
Stop	Stop / Hold
Index	Info / Angle
Size	Zoom / Size
<<	<< / Tune-
>>	>> / Tune+
I<<	I<< / Preset-
>>I	>>I / Preset+
Red	Red / Netflix / Search

Original	Recharge
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

