

 

 



 



 



 

 

 

 

 



 



 



 



 







 

 



 

 



 









 

 
 


| Original | | Rechange | | Original | | Rechange | |
|---|----------|---|-----------------------|---|-----------|---|-----------------------|
|  | Power |  | Power |  | Index |  | D.Menu / Top |
|  | Mute |  | Mute / Dimmer |  | Reveal |  | Setup / OPT / |
|  | Play |  | Play / Slow |  | Text |  | Text / Goto |
|  | Pause |  | Pause / Step / Freeze |  | AV/Source |  | AV / Input / RDS |
|  | Stop |  | Stop / Hold |  | Menu |  | Menu / Home |
|  | Rec |  | Rec / Rec Mode |  | Up |  | Up |
|  | << |  | << / Tune- |  | i/Info |  | Info / Angle |
|  | >> |  | >> / Tune+ |  | Left |  | Left |
|  | I<< |  | I<< / Preset- |  | OK |  | OK |
|  | >>I |  | >>I / Preset+ |  | Right |  | Right |
|  | S.Mode |  | Sound / Title |  | Exit |  | Exit / Cancel / Clear |
|  | Audio |  | Audio / Lang I/II |  | Down |  | Down |
|  | Subtitle |  | Subtitle / EQ |  | Back |  | Back / Return |
|  | P.Mode |  | Picture / Format |  | Vol+ |  | Vol+ |
|  | Size |  | Zoom / Size |  | Rec List |  | Smart / List |
|  | Sleep |  | Sleep / Timer |  | CH+ |  | CH+ / Page+ |
|  | Tv/Radio |  | TV/Radio / |  | Vol- |  | Vol- |





| Original | Rechange |
|---|---|
|  ATV |  Display / Media |
|  CH- |  CH- / Page- |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  Tv Guide |  Guide / EPG / -/-- |
|  0 |  0 |
|  FAV |  Fav / Marker / PC |
|  Red |  Red / Netflix / Search |
|  Green |  Green / APP / Repeat |
|  Yellow |  Yellow / YouTube / Repeat |

| Original | Rechange |
|---|---|
|  Blue |  Blue / Prime Video / Random |
|  Power/Display |  Shift + Power |
|  Hold |  Shift + Stop / |
|  Aspect |  Shift + Picture / Format |
|  USB |  Shift + 8 |

