 



 



 

 

 






 
 



 



 



 



 


 



 



 



 



 



 



 

 



 

 

 

 

 

 

 

 

 











Original	Rechange	Original	Rechange
 Standby	 Power	 Vol+	 Vol+
 Rec PVR	 Rec / Rec Mode	 Right	 Right
 PVR List	 Smart / List	 Favourite	 Fav / Marker / PC
 Mute	 Mute / Dimmer	 CH-	 CH- / Page-
 EPG	 Guide / EPG / -/-	 Down	 Down
 Info	 Info / Angle	 Tv/Radio	 TV/Radio /
 TTX	 Text / Goto	 1	 1
 Audio	 Audio / Lang I/II	 2	 2
 DTV/VCR	 AV / Input / RDS	 3	 3
 Subtitle	 Subtitle / EQ	 Recall	 Back / Return
 Menu	 Menu / Home	 4	 4
 Up	 Up	 5	 5
 CH+	 CH+ / Page+	 6	 6
 Exit	 Exit / Cancel / Clear	 Goto	 Shift + Goto / Text /
 Left	 Left	 7	 7
 Vol-	 Vol-	 8	 8
 OK	 OK	 9	 9





	Original	Recharge	Original	Recharge
	0			
	<<			<< / Tune-
	>>			>> / Tune+
	<<			<< / Preset-
	>>			>> / Preset+
	Play			Play / Slow
	Pause			Pause / Step / Freeze
	Stop			Stop / Hold
	Repeat			Shift + Green / APP / APP /
	Red			Red / Netflix / Search
	Green			Green / APP / Repeat
	Yellow			Yellow / YouTube / Repeat
	Blue			Blue / Prime Video / Random

