



Original	Recharge
Power	Power
Source	AV
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
TV	TV/R
Recall	Pre Ch
Vol+	Vol +
Vol-	Vol -
Mute	Mute

Original	Recharge
World/Internet	Smart
P+	Ch +
P-	Ch -
Menu	Menu
Q.Menu	D. Menu
Back	Back
Exit	Exit
Up	Up
Down	Down
Right	Right
Left	Left
OK	Ok
i	Info
Photo/Music/Cam	Media
Guide	Guide
*/O	Format
*/Q	3D



