



Original		Recharge		Original		Recharge	
	Power		Power		Rec		Rec / Rec Mode
	Mute		Mute / Dimmer		PVR List		Smart / List
	Red		Red / Netflix / Search		Menu		Menu / Home
	Green		Green / APP / Repeat		Up		Up
	Yellow		Yellow / YouTube / Repeat		Exit		Exit / Cancel / Clear
	Blue / Timer		Blue / Prime Video / Random		Left		Left
	Format		Picture / Format		OK		OK
	RES.		AV / Input / RDS		Right		Right
	TTX		Text / Goto		EPG		Guide / EPG / -/-
	S-T		Subtitle / EQ		Down		Down
	I<<		I<< / Preset-		Info		Info / Angle
	>>I		>>I / Preset+		CH +		CH+ / Page+
	<<		<< / Tune-		TV / Rad		TV/Radio /
	>>		>> / Tune+		Vol +		Vol+
	Play / Pause		Play / Slow		CH -		CH- / Page-
	Play / Pause		Pause / Step / Freeze		Audio		Audio / Lang I/II
	Stop		Stop / Hold		Vol -		Vol-





Original		Rechange	
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD - STB 3	3
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
FAV	FAV	PC FAV MARKER	Fav / Marker / PC
0	0	HDMI - BAT 0	0
	Recall	RETURN BACK	Back / Return

Original		Rechange	

