



Original	Rechange	Original	Rechange
	Power		Power
	Mute		Mute / Dimmer
	Hold		Stop / Hold
	♪		Sound / Title
	Sub		Subtitle / EQ
	16:9		Picture / Format
	TV/TX		TV/Radio /
	Double		D.Menu / Top
	[]		Setup / OPT /
	Mix		Text / Goto
	AV		AV / Input / RDS
	Menu		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Swap		Back / Return
	Vol+		Vol+
	PP		Smart / List
	PR+		CH+ / Page+
	Vol-		Vol-
	PR-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Guide / EPG / -/--
	0		0





	Original	Recharge	
	Violet	FAV MARKER	Fav / Marker / PC
	Red	NETFLIX SEARCH	Red / Netflix / Search
	Green	APP REPEAT	Green / APP / Repeat
	Yellow/Timer	YouTube REPEAT A-B	Yellow / YouTube / Repeat
	Blue	Prime Video RANDOM	Blue / Prime Video / Random
	Update	SHIFT + OK	Shift + OK
	Reveal	SHIFT + RETURN BACK	Shift + Back / Return
	P100	SHIFT + HDMI - BAT 0	Shift + 0

	Original	Recharge

