










 

 

 



 









 



 



 






 



 







 


 



 








Original		Rechange		Original		Rechange	
	POWER		Power		USB		AV
	MUTE		Mute		MENU		Menu
	DISP		Shift + Info		EXIT		Exit
	AUDIO		Dual		UP		Up
	Tv/Radio		TV/R		DOWN		Down
	SLEEP		Sleep		RIGHT		Right
	1		1		LEFT		Left
	2		2		OK		Ok
	3		3		CH+		Ch +
	4		4		CH-		Ch -
	5		5		VOL+		Vol +
	6		6		VOL-		Vol -
	7		7		P↑		Shift + Ch +
	8		8		P↓		Shift + Ch -
	9		9		INFO		Info
	0		0		BACK		Back
	EPG		Guide		ZOOM		Eject



