
 
 




Original	Rechange	Original	Rechange
 Tv	 TV/Radio /	 Recall	 Shift + Back / Return
 Power	 Power	 Red	 Red / Netflix / Search
 World	 Smart / List	 Green	 Green / APP / Repeat
 [=]/Text	 Text / Goto	 Yellow	 Yellow / YouTube / Repeat
 Sleep	 Sleep / Timer	 Blue	 Blue / Prime Video / Random
 Music/Movie/Phot	 Sound / Title	 Vol+	 Vol+
 1	 1	 Mute	 Mute / Dimmer
 2	 2	 PR+	 CH+ / Page+
 3	 3	 Vol-	 Vol-
 4	 4	 i	 Info / Angle
 5	 5	 PR-	 CH- / Page-
 6	 6	 Menu	 Menu / Home
 7	 7	 Up	 Up
 8	 8	 Q.Menu	 D.Menu / Top
 9	 9	 Left	 Left
 Source/Games	 AV / Input / RDS	 OK	 OK
 0	 0	 Right	 Right





Original	Rechange	Original	Rechange
 Back	 Back / Return		
 Down	 Down		
 Exit	 Exit / Cancel / Clear		
 [≡]..	 Setup / OPT /		
 Lang	 Audio / Lang I/II		
 O/*	 Zoom / Size		
 Q./.*	 Picture / Format		
 Play	 Play / Slow		
 Stop	 Stop / Hold		
 <<	 << / Tune-		
 >>	 >> / Tune+		
 Pause	 Pause / Step / Freeze		
 Rec	 Rec / Rec Mode		
 Guide	 Guide / EPG / -/--		
 [-O-]	 Display / Media		

