 
 

 
 


 

 



 
 
 
 
 
 
 


 
 

 

 
 
 

 

 

 
 




Original	Rechange	Original	Rechange
 Power	 Power	 Ch+	 Ch +
 Display	 +  Shift + Info	 Ch-	 Ch -
 Nicam/A2	 LIST List	 Vol+	 Vol +
 Mute	 Mute	 Vol-	 Vol -
 PMode	 +  Shift + Format	 1	 1
 SMode	 +  Shift + Dual	 2	 2
 Sleep	 Sleep	 3	 3
 Aspect	 3D	 4	 4
 LCD-Menu	 Menu	 5	 5
 DVB-Menu	 D. Menu	 6	 6
 Source	 AV	 7	 7
 Exit	 Exit	 8	 8
 Up	 Up	 9	 9
 Down	 Down	 0	 0
 Right	 Right	 Text	 Text
 Left	 Left	 Hold	 Media
 Enter	 Ok	 Red	 Red





Original		Rechange		Original	Rechange
	Green		Green		
	Yellow		Yellow		
	Cyan		Blue		
	Index		Smart		
	Size		Format		
	Reveal		Options		
	Subpage		Eject		
	Tv/Radio		TV/R		
	Lang		Dual		
	Page-		I<<		
	Page+		>>I		
	Subtitle		Subt		
	Epg		Guide		
	Fav		Pre Ch		
	Info		Info		

