 

















 







 









 






 



 


 








 












| Original  |                | Rechange  |                      | Original  |              | Rechange  |                    |
|---|----------------|---|----------------------|---|--------------|---|--------------------|
|    | Power          |    | Power                |    | ECO          |    | Display / Media    |
|    | 1              |    | 1                    |    | CEC          |    | Smart / List       |
|    | 2              |    | 2                    |    | Mute         |    | Mute / Dimmer      |
|    | 3              |    | 3                    |    | i            |    | Info / Angle       |
|    | 4              |    | 4                    |    | Z/Back       |    | Back / Return      |
|    | 5              |    | 5                    |    | PR+          |    | CH+ / Page+        |
|    | 6              |    | 6                    |    | Up           |    | Up                 |
|    | 7              |    | 7                    |    | Vol-         |    | Vol-               |
|    | 8              |    | 8                    |    | Left         |    | Left               |
|    | 9              |    | 9                    |    | OK           |    | OK                 |
|   | 0              |   | 0                    |   | Right        |   | Right              |
|  | AV/CL          |  | AV / Input / RDS     |  | Vol+         |  | Vol+               |
|  | Zoom           |  | Zoom / Size          |  | Down         |  | Down               |
|  | [...]/Subtitle |  | Subtitle / EQ        |  | PR-          |  | CH- / Page-        |
|  | Audio/Language |  | Audio / Lang I/II    |  | TVG/Top Menu |  | Guide / EPG / -/-- |
|  | ◀/Camera       |  | Shift + Info / Angle |  | TVG/Top Menu |  | D.Menu / Top       |
|  | ?              |  | Setup / OPT /        |  | TXT/Menu     |  | Text / Goto        |



 

















 







 









 













 



















|  | Original | Recharge | Original | Recharge                    |
|--|----------|----------|----------|-----------------------------|
|  |          | TXT/Menu |          | Menu / Home                 |
|  |          | Red      |          | Red / Netflix / Search      |
|  |          | Green    |          | Green / APP / Repeat        |
|  |          | Yellow   |          | Yellow / YouTube / Repeat   |
|  |          | Blue     |          | Blue / Prime Video / Random |
|  |          | [<>]     |          | Shift + Zoom /              |
|  |          | Rec/l>   |          | Rec / Rec Mode              |
|  |          | Play     |          | Play / Slow                 |
|  |          | Pause    |          | Pause / Step / Freeze       |
|  |          | Stop     |          | Stop / Hold                 |
|  |          | I<       |          | I<< / Preset-               |
|  |          | >I       |          | >>I / Preset+               |
|  |          | <<       |          | << / Tune-                  |
|  |          | >>       |          | >> / Tune+                  |
|  |          |          |          |                             |
|  |          |          |          |                             |
|  |          |          |          |                             |






 




 

 





 















| Original  |                | Rechange  |                      | Original  |              | Rechange  |                    |
|---|----------------|---|----------------------|---|--------------|---|--------------------|
|    | Power          |    | Power                |    | ECO          |    | Display / Media    |
|    | 1              |    | 1                    |    | CEC          |    | Smart / List       |
|    | 2              |    | 2                    |    | Mute         |    | Mute / Dimmer      |
|    | 3              |    | 3                    |    | i            |    | Info / Angle       |
|    | 4              |    | 4                    |    | Z/Back       |    | Back / Return      |
|    | 5              |    | 5                    |    | PR+          |    | CH+ / Page+        |
|    | 6              |    | 6                    |    | Up           |    | Up                 |
|    | 7              |    | 7                    |    | Vol-         |    | Vol-               |
|    | 8              |    | 8                    |    | Left         |    | Left               |
|    | 9              |    | 9                    |    | OK           |    | OK                 |
|   | 0              |   | 0                    |   | Right        |   | Right              |
|  | AV/CL          |  | AV / Input / RDS     |  | Vol+         |  | Vol+               |
|  | Zoom           |  | Zoom / Size          |  | Down         |  | Down               |
|  | [...]/Subtitle |  | Subtitle / EQ        |  | PR-          |  | CH- / Page-        |
|  | Audio/Language |  | Audio / Lang I/II    |  | TVG/Top Menu |  | Guide / EPG / -/-- |
|  | ◀/Camera       |  | Shift + Info / Angle |  | TVG/Top Menu |  | D.Menu / Top       |
|  | ?              |  | Setup / OPT /        |  | TXT/Menu     |  | Menu / Home        |





| Original   | Recharge  | Original | Recharge |
|--|---|----------|----------|
|  TXT/Menu |  Text / Goto                 |          |          |
|  Red      |  Red / Netflix / Search      |          |          |
|  Green    |  Green / APP / Repeat        |          |          |
|  Yellow   |  Yellow / YouTube / Repeat   |          |          |
|  Blue     |  Blue / Prime Video / Random |          |          |
|  [ <> ]   |  Shift + Zoom /              |          |          |
|  Rec/l>   |  Rec / Rec Mode              |          |          |
|  Play     |  Play / Slow                 |          |          |
|  Pause    |  Pause / Step / Freeze       |          |          |
|  Stop     |  Stop / Hold                 |          |          |
|   <      |   << / Preset-              |          |          |
|  >      |  >>  / Preset+             |          |          |
|  <<     |  << / Tune-                |          |          |
|  >>     |  >> / Tune+                |          |          |
|  |   |          |          |
|  |   |          |          |
|  |   |          |          |













 

 



















| Original | Rechange                |
|----------|-------------------------|
|          | Power                   |
|          | 1                       |
|          | 2                       |
|          | 3                       |
|          | 4                       |
|          | 5                       |
|          | 6                       |
|          | 7                       |
|          | 8                       |
|          | 9                       |
|          | 0                       |
|          | AV / Input / RDS        |
|          | Zoom / Size             |
|          | Subtitle / EQ           |
|          | Audio / Lang I/II       |
|          | +  Shift + Info / Angle |
|          | Setup / OPT /           |

| Original | Rechange           |
|----------|--------------------|
|          | Display / Media    |
|          | Smart / List       |
|          | Mute / Dimmer      |
|          | Info / Angle       |
|          | Back / Return      |
|          | CH+ / Page+        |
|          | Up                 |
|          | Vol-               |
|          | Left               |
|          | OK                 |
|          | Right              |
|          | Vol+               |
|          | Down               |
|          | CH- / Page-        |
|          | Guide / EPG / -/-- |
|          | D.Menu / Top       |
|          | Text / Goto        |



 

















 




















 











 
 






|   | Original | Recharge  | Original | Recharge |
|---|----------|---|----------|----------|
|    | TXT/Menu |  Menu / Home                 |          |          |
|    | Red      |  Red / Netflix / Search      |          |          |
|    | Green    |  Green / APP / Repeat        |          |          |
|    | Yellow   |  Yellow / YouTube / Repeat   |          |          |
|    | Blue     |  Blue / Prime Video / Random |          |          |
|    | [<>]     |  Shift + Zoom /              |          |          |
|    | Rec/l>   |  Rec / Rec Mode              |          |          |
|    | Play     |  Play / Slow                 |          |          |
|    | Pause    |  Pause / Step / Freeze       |          |          |
|    | Stop     |  Stop / Hold                 |          |          |
|   | I<       |  I<< / Preset-              |          |          |
|  | >I       |  >>I / Preset+             |          |          |
|  | <<       |  << / Tune-                |          |          |
|  | >>       |  >> / Tune+                |          |          |
|   |          |   |          |          |
|   |          |   |          |          |
|   |          |   |          |          |







| Original   | Rechange   |
|--|--|
|  Power              |  Power  |
|  1                  |  1  |
|  2                  |  2  |
|  3                  |  3  |
|  4                  |  4  |
|  5                  |  5  |
|  6                  |  6  |
|  7                  |  7  |
|  8                  |  8  |
|  9                  |  9  |
|  0                 |  0   |
|  AV/CL            |  AV / Input / RDS   |
|  Zoom             |  Zoom / Size  |
|  [...] / Subtitle |  Subtitle / EQ  |
|  Audio / Language |  Audio / Lang I / II  |
|  ◀ / Camera       |  +  Shift + Info / Angle |
|  ?                |  Setup / OPT /  |

| Original   | Rechange   |
|--|--|
|  ECO              |  Display / Media      |
|  CEC              |  Smart / List         |
|  Mute             |  Mute / Dimmer        |
|  i                |  Info / Angle         |
|  Z / Back         |  Back / Return        |
|  PR+              |  CH+ / Page+          |
|  Up               |  Up                   |
|  Vol-             |  Vol-                 |
|  Left             |  Left                 |
|  OK               |  OK                   |
|  Right           |  Right               |
|  Vol+           |  Vol+               |
|  Down           |  Down               |
|  PR-            |  CH- / Page-        |
|  TVG / Top Menu |  Guide / EPG / -/-- |
|  TVG / Top Menu |  D.Menu / Top       |
|  TXT / Menu     |  Text / Goto        |





|  | Original | Recharge | Original | Recharge                    |
|--|----------|----------|----------|-----------------------------|
|  |          | TXT/Menu |          | Menu / Home                 |
|  |          | Red      |          | Red / Netflix / Search      |
|  |          | Green    |          | Green / APP / Repeat        |
|  |          | Yellow   |          | Yellow / YouTube / Repeat   |
|  |          | Blue     |          | Blue / Prime Video / Random |
|  |          | [<>]     |          | Shift + Zoom /              |
|  |          | Rec/l>   |          | Rec / Rec Mode              |
|  |          | Play     |          | Play / Slow                 |
|  |          | Pause    |          | Pause / Step / Freeze       |
|  |          | Stop     |          | Stop / Hold                 |
|  |          | I<       |          | I<< / Preset-               |
|  |          | >I       |          | >>I / Preset+               |
|  |          | <<       |          | << / Tune-                  |
|  |          | >>       |          | >> / Tune+                  |
|  |          |          |          |                             |
|  |          |          |          |                             |
|  |          |          |          |                             |

