





 

 








Original		Rechange		Original		Rechange	
	Power		Power		3D		Shift + 3
	1		1		?		Display / Media
	2		2		@		Info / Angle
	3		3		Menu		Menu / Home
	4		4		Up		Up
	5		5		←		Back / Return
	6		6		Left		Left
	7		7		OK		OK
	8		8		→		Right
	9		9		Tools		Setup / OPT /
	FAV		Fav / Marker / PC		Down		Down
	0		0		Guide		Guide / EPG / -/--
	TXT		Text / Goto		Vol+		Vol+
	Red		Red / Netflix / Search		Source		AV / Input / RDS
	Green		Green / APP / Repeat		P+		CH+ / Page+
	Yellow		Yellow / YouTube / Repeat		Vol-		Vol-
	Blue		Blue / Prime Video / Random		Mute		Mute / Dimmer





Original	Recharge	Original	Recharge
 P-	 CH- / Page-		
 I<	 I<< / Preset-		
 >I	 >>I / Preset+		
 <<	 << / Tune-		
 >>	 >> / Tune+		
 Rec	 Rec / Rec Mode		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 Stop	 Stop / Hold		
 Rec List	 Smart / List		
 OQ	 Audio / Lang I/II		
 [...].	 Subtitle / EQ		

