



| Original | Recharge |
|--------------|------------------|
| On | Power |
| Off | + Shift + Power |
| Mute | Mute |
| AVR | + Shift + 1 |
| DVD | + Shift + 2 |
| CD | + Shift + 3 |
| Tape | + Shift + 4 |
| VID1/VCR | + Shift + 5 |
| VID2/TV | + Shift + 6 |
| VID3/CBL/SAT | + Shift + 7 |
| VID4 | + Shift + 8 |
| AM/FM | + Shift + 9 |
| 6/8 CH | + Shift + Guide |
| Sleep | Sleep |
| Test | Text |
| Surr. | Dual |
| Night | List |

| Original | Recharge |
|--------------|----------|
| M-Room | D. Menu |
| Vol+ | Vol + |
| Vol- | Vol - |
| CH./[≡?] | TV/R |
| SPKR/Menu | Menu |
| Up | Up |
| Left | Left |
| Set | Ok |
| Right | Right |
| Down | Down |
| Digital/[≡X] | Subt |
| Delay/Normal | Pre Ch |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |



 


 
 

 


 
 


 

 





 



 



 



 



 

 
 
 
 


 
 



 

 


 
 
 





 
 


 


| Original | Recharge |
|------------|------------------|
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| 0 | 0 |
| Tun-M/[≡+] | HOME Smart |
| Mem/[≡◆] | APP Media |
| Tuning ▲ | CH + |
| Tuning ▼ | CH - |
| Direct | GUIDE Guide |
| Clear | CLEAR Exit |
| OSD | DISPLAY Info |
| RDS | SETTINGS Options |
| Preset ▲ | SHIFT + CH + |
| Preset ▼ | SHIFT + CH - |
| Dolby | A Red |
| DTS Surr. | B Green |

| Original | Recharge |
|---------------|-----------------------|
| DTS Neo 6 | C Yellow |
| Logic 7 | D Blue |
| Stereo | SHIFT + A Shift + Red |
| I<</Skip Down | I<< |
| Skip Up/>>I | I>> |
| << DVD | << |
| Play DVD | PLAY MODE Play |
| >> DVD | >> |
| Stop DVD | Stop |
| Pause DVD | Pause |





 


 





 



 






 













 







 
 






 



 
 
 









| Original | | Rechange | | Original | | Rechange | |
|---|--------------|---|---------------|---|------------|---|--------------|
|  | Power On |  | Power |  | 3 |  | 3 |
|  | Power Off |  | Shift + Power |  | 4 |  | 4 |
|  | Night |  | Exit |  | 5 |  | 5 |
|  | M-Room |  | Text |  | 6 |  | 6 |
|  | Vol+ |  | Vol + |  | 7 |  | 7 |
|  | Vol- |  | Vol - |  | 8 |  | 8 |
|  | SPKR/Menu |  | Menu |  | 9 |  | 9 |
|  | CH./[≡?] |  | TV/R |  | 0 |  | 0 |
|  | Digital/[≡X] |  | Media |  | Tun-M/[≡+] |  | Guide |
|  | Delay/Normal |  | Info |  | Mem/[≡◇] |  | Pre Ch |
|  | Up |  | Up |  | Direct |  | Smart |
|  | Down |  | Down |  | Clear |  | Shift + Exit |
|  | Right |  | Right |  | Preset ▲ |  | Ch + |
|  | Left |  | Left |  | Preset ▼ |  | Ch - |
|  | Set |  | Ok |  | RDS/D.Skip |  | Options |
|  | 1 |  | 1 |  | >> |  | >> |
|  | 2 |  | 2 |  | << |  | << |





| Original | | Rechange | | Original | | Rechange | |
|---|--------------|---|---------------|---|-----------------|---|--------------|
|  | Power On |  | Power |  | Preset ▲/Blue |  | Ch + |
|  | Power Off |  | Shift + Power |  | RDS/D.Skip |  | Options |
|  | SPKR/MENU |  | Menu |  | >> |  | >> |
|  | Delay/Normal |  | Info |  | << |  | << |
|  | 1 |  | 1 |  | Play |  | Play |
|  | 2 |  | 2 |  | Stop |  | Stop |
|  | 3 |  | 3 |  | Pause |  | Pause |
|  | 4 |  | 4 |  | >> |  | >> |
|  | 5 |  | 5 |  | << |  | << |
|  | 6 |  | 6 |  | Power (On /Off) |  | Media |
|  | 7 |  | 7 |  | PR+ VCR |  | Shift + Ch + |
|  | 8 |  | 8 |  | PR- VCR |  | Ch - |
|  | 9 |  | 9 |  | Vol+ VCR |  | Vol + |
|  | 0 |  | 0 |  | Vol- VCR |  | Vol - |
|  | Tun-M/[≡+] |  | Guide |  | 1 VCR |  | Shift + 1 |
|  | Mem/[≡♦] |  | Pre Ch |  | 2 VCR |  | Shift + 2 |
|  | Direct |  | Smart |  | 3 VCR |  | Shift + 3 |



