



Original	Recharge	Original	Recharge
Off	Shift + Power	Night	TV/Radio /
On	Power	M-Room	Zoom / Size
Mute	Mute / Dimmer	Vol-	Vol-
AVR	Smart / List	CH.	Info / Angle
DVD	Shift + 2	Up	Up
CD	Shift + 3	SPKR/Menu	Menu / Home
Tape	Shift + 5	Left	Left
VID1/VCR	Shift + 4	Set	OK
VID2/TV	Shift + 1	Right	Right
VID3/CBL/SAT	Shift + 0	Digital	D.Menu / Top
VID4	Shift + 7	Down	Down
AM/FM	Shift + 6	Delay/Normal	Setup / OPT /
6 CH	Shift + 8	1	1
Sleep	Sleep / Timer	2	2
Test	Text / Goto	3	3
Vol+	Vol+	4	4
Surr.	Eject / Surround	5	5





Original	Recharge	Original	Recharge
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
TUN-M	Tun-M	NETFLIX SEARCH	Red / Netflix / Search
9	9	BLUETOOTH 9	9
0	0	HDMI - BAT 0	0
MEM	Mem	APP REPEAT	Green / APP / Repeat
Tuning ▲	Tuning ▲	TUNE+	>> / Tune+
DIRECT	Direct	RETURN BACK	Back / Return
CLEAR	Clear	CLEAR EXIT CANCEL	Exit / Cancel / Clear
Preset ▲	Preset ▲	PRESET+	>>I / Preset+
Tuning ▼	Tuning ▼	TUNE-	<<< / Tune-
OSD	OSD	MEDIA DISPLAY	Display / Media
RDS	RDS	RDS AV INPUT	AV / Input / RDS
Preset ▼	Preset ▼	PRESET-	I<<< / Preset-
<<< DVD	<<< DVD	SHIFT + TUNE-	Shift + <<< /
Play DVD	Play DVD	SHIFT + SLOW	Shift + Play / Slow

Original	Recharge	Original	Recharge
>>> DVD	>>> DVD	SHIFT + TUNE+	Shift + >>> /
Stop DVD	Stop DVD	SHIFT + HOLD	Shift + Stop /
Pause DVD	Pause DVD	SHIFT + STEP - FREEZE	Shift + Pause / Step /
I<<</Skip Down	I<<</Skip Down	SHIFT + PRESET-	Shift + I<<< / Preset-
Skip Up/>>>I	Skip Up/>>>I	SHIFT + PRESET+	Shift + >>>I / Preset+







Original		Recharge		Original		Recharge	
	Power Off		Shift + Power		3		3
	Power On		Power		4		4
	Vol+		Vol+		5		5
	Night		TV/Radio /		6		6
	[≡] / M-Room		Zoom / Size		7		7
	Vol-		Vol-		8		8
	CH.		Info / Angle		Tun-M		Red / Netflix / Search
	Up		Up		9		9
	SPKR/Menu		Menu / Home		0		0
	Left		Left		Mem		Green / APP / Repeat
	Set		OK		Direct		Back / Return
	Right		Right		Clear		Exit / Cancel / Clear
	Digital/Exit		D.Menu / Top		Preset ▲		Shift + >>I / Preset+
	Down		Down		RDS		AV / Input / RDS
	Delay/Normal		Setup / OPT /		Preset ▼		Shift + I<< / Preset-
	1		1		<<		<< / Tune-
	2		2		Play		Play / Slow









Original		Recharge		Original		Recharge	
	Power On		Power		Mem		Green / APP / Repeat
	Power Off		Shift + Power		RDS		AV / Input / RDS
	Vol-		Vol-		>>		>> / Tune+
	Vol+		Vol+		<<		<< / Tune-
	SPKR/Menu		Menu / Home		Play		Play / Slow
	1		1		Stop		Stop / Hold
	Delay/Normal		Setup / OPT /		Direct		Back / Return
	2		2		Pause		Pause / Step / Freeze
	3		3		Preset ▲		CH+ / Page+
	4		4		>>I		>>I / Preset+
	5		5		I<<		I<< / Preset-
	6		6		Power (On/Off)		Mute / Dimmer
	7		7		PR+ VCR		Shift + CH+ /
	8		8		PR- VCR		Shift + CH- /
	9		9		Vol- VCR		Shift + Vol-
	0		0		Vol+ VCR		Shift + Vol+
	Tun-M		Red / Netflix / Search		1 VCR		Shift + 1







