



| Original | | Rechange | | Original | | Rechange | |
|---|----------|---|---------------------------|---|------------------|---|-------------------------|
|  | Power |  | Power |  | 9 |  | 9 |
|  | Sleep |  | Sleep / Timer |  | EPG |  | Guide / EPG / -/- |
|  | Screen |  | Picture / Format |  | 0 |  | 0 |
|  | Presets |  | Setup / OPT / |  | Swap |  | Fav / Marker / PC |
|  | ↔ |  | TV/Radio / |  | Photo/Music/Movi |  | D.Menu / Top |
|  | FAV |  | Shift + Fav / Marker / PC |  | World |  | Smart / List |
|  | Lang |  | Audio / Lang I/II |  | Source |  | AV / Input / RDS |
|  | Subtitle |  | Subtitle / EQ |  | Menu |  | Menu / Home |
|  | TXT |  | Text / Goto |  | Up |  | Up |
|  | 1 |  | 1 |  | Left |  | Left |
|  | 2 |  | 2 |  | OK |  | OK |
|  | 3 |  | 3 |  | Right |  | Right |
|  | 4 |  | 4 |  | Down |  | Down |
|  | 5 |  | 5 |  | C |  | Exit / Cancel / Clear |
|  | 6 |  | 6 |  | Disp. |  | Display / Media |
|  | 7 |  | 7 |  | Search Mode |  | Shift + Red / Netflix / |
|  | 8 |  | 8 |  | Return |  | Back / Return |





| Original | | Recharge | | Original | | Recharge | |
|----------|----------------|----------|------------------------|----------|-------------|----------|-----------------------------|
| | CH+ | | CH+ / Page+ | | Yellow/Root | | Yellow / YouTube / Repeat |
| | Info | | Info / Angle | | Blue/Title | | Blue / Prime Video / Random |
| | Vol+ | | Vol+ | | | | |
| | CH- | | CH- / Page- | | | | |
| | Mute | | Mute / Dimmer | | | | |
| | Vol- | | Vol- | | | | |
| | Rec | | Rec / Rec Mode | | | | |
| | Pause | | Pause / Step / Freeze | | | | |
| | I<< | | I<< / Preset- | | | | |
| | >>I | | >>I / Preset+ | | | | |
| | << | | << / Tune- | | | | |
| | Play | | Play / Slow | | | | |
| | Stop | | Stop / Hold | | | | |
| | >> | | >> / Tune+ | | | | |
| | Red/↑/Zoom | | Red / Netflix / Search | | | | |
| | Red/↑/Zoom | | Zoom / Size | | | | |
| | Green/↓/Repeat | | Green / APP / Repeat | | | | |

