




























 








































Original	Rechange	Original	Rechange
Power		Power	
Play		Play / Slow	
Pause		Pause / Step / Freeze	
Stop		Stop / Hold	
Rec		Rec / Rec Mode	
<<		<< / Tune-	
>>		>> / Tune+	
Eject		Eject / Surround	
Timer		Sleep / Timer	
Menu		Menu / Home	
Up		Up	
Left		Left	
Right		Right	
C.Reset		Exit / Cancel / Clear	
Down		Down	
Prog Up		CH+ / Page+	
ShowView		Display / Media	
Prog Down		CH- / Page-	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
+10/Daily/Weekly		Guide / EPG / -/-	
0		0	
Quick-Find		Red / Netflix / Search	
Time Search		Green / APP / Repeat	
Index Search		Yellow / YouTube / Repeat	
Speed		Blue / Prime Video / Random	
I> Slow		Shift + Play / Slow	



Original	Recharge	Original	Recharge
Power		Power	Power
Play		Play / Slow	Play / Slow
Pause		Pause / Step / Freeze	Pause / Step / Freeze
Stop		Stop / Hold	Stop / Hold
<<		<< / Tune-	<< / Tune-
>>		>> / Tune+	>> / Tune+
I<< Skip		I<< / Preset-	I<< / Preset-
Skip >>I		>>I / Preset+	>>I / Preset+
Audio		Audio / Lang I/II	Audio / Lang I/II
Subtitle		Subtitle / EQ	Subtitle / EQ
Open/Close		Eject / Surround	Eject / Surround
Zoom		Zoom / Size	Zoom / Size
Top Menu		D.Menu / Top	D.Menu / Top
Setup		Setup / OPT /	Setup / OPT /
Mode		Text / Goto	Text / Goto
Menu		Menu / Home	Menu / Home
Up		Up	Up
Angle		Info / Angle	Info / Angle
Left		Left	Left
Enter		OK	OK
Right		Right	Right
Clear		Exit / Cancel / Clear	Exit / Cancel / Clear
Down		Down	Down
Return		Back / Return	Back / Return
Disc Navigator		Smart / List	Smart / List
Display		Display / Media	Display / Media
1		1	1
2		2	2
3		3	3
4		4	4
5		5	5
6		6	6
7		7	7
8		8	8



