











 














 



 


 















 







 





 







| Original  |        | Rechange  |                  | Original  |        | Rechange  |                          |
|---|--------|---|------------------|---|--------|---|--------------------------|
|    | Power  |    | Power            |    | Vol +  |    | Vol+                     |
|    | Mute   |    | Mute / Dimmer    |    | MTS    |    | Audio / Lang I/II        |
|    | 1      |    | 1                |    | CH +   |    | CH+ / Page+              |
|    | 2      |    | 2                |    | Vol -  |    | Vol-                     |
|    | 3      |    | 3                |    | Aspect |    | Shift + Picture / Format |
|    | 4      |    | 4                |    | CH -   |    | CH- / Page-              |
|    | 5      |    | 5                |    | Guide  |    | Guide / EPG / -/-        |
|    | 6      |    | 6                |    | Home   |    | Shift + Menu /           |
|    | 7      |    | 7                |    | Rec    |    | Rec / Rec Mode           |
|   | 8      |   | 8                |   | Menu   |   | Menu / Home              |
|  | 9      |  | 9                |  | Up     |  | Up                       |
|  | List   |  | Smart / List     |  | Source |  | AV / Input / RDS         |
|  | 0      |  | 0                |  | Left   |  | Left                     |
|  | Recall |  | Back / Return    |  | Enter  |  | OK                       |
|  | P.Mode |  | Picture / Format |  | Right  |  | Right                    |
|  | S.Mode |  | Sound / Title    |  | Exit   |  | Exit / Cancel / Clear    |
|  | Sleep  |  | Sleep / Timer    |  | Down   |  | Down                     |



