



Original	Rechange
	 Mute / Dimmer
	 Power
	 TV/Radio /
	 Guide / EPG / -/--
	 Fav / Marker / PC
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Menu / Home
	 0
	 Back / Return

Original	Rechange
	 Info / Angle
	 Vol+
	 OK
	 CH+ / Page+
	 Up
	 Left
	 Right
	 Vol-
	 Down
	 CH- / Page-
	 Exit / Cancel / Clear
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 << / Tune-
	 << / Preset-





Original	Recharge	Original	Recharge
Play / Pause	Play / Slow		
>> / >>I	>> / Tune+		
>> / >>I	>>I / Preset+		
Library	Display / Media		
Rec	Rec / Rec Mode		
Stop	Stop / Hold		
Text	Text / Goto		
Personal Planner	Smart / List		
Sub / Audio	Audio / Lang I/II		
Sub / Audio	Subtitle / EQ		
History	D.Menu / Top		
PIP	Picture / Format		
PIP Swap	Zoom / Size		
PIP Position	Setup / OPT /		
Sleep Timer	Sleep / Timer		

Original	Recharge	Original	Recharge

