
 
 



 
 

 
 


 



 



 
 


 

 


 





 
 


 









 

 

 



 

 





 





 



 

 
 






Original	Recharge	Original	Recharge
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 Smart	Menu Off	 Exit
Reveal	 List	Menu Down	 Down
Txt Stop	 Stop	Back	 Back
Info	 +  Shift + Info	Volume+	 Vol +
Subt.List	 Subt	Chan.Up	 Ch +
Sleep Timer	 Sleep	Volume-	 Vol -
Return TV	 TV/R	Menu audio	 Dual
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7



Original	Recharge	Recharge
8		8
9		9
Guide -/-- 1.		Guide
0/10		0
2.Fav P/C 2.		Pre Ch
Red		Red
Green		Green
Yellow		Yellow
Blue		Blue
Rotate Text	 + 	Shift + Text
Audio-	 + 	Shift + Left
Audio+	 + 	Shift + Right
Off/Tim		Pause
On/Tim		Play
Color+ P.Std		Format
Aft/Caf		Options
Game Coo	 + 	Shift + Eject

Original	Recharge	Recharge
Tune-		<<
Tune+		>>
Store		3D
Tone-	 + 	Shift + Down
Color- S.Std	 + 	Shift + Dual
Browse		Media
Tone+	 + 	Shift + Up
Bright+ Mode	 + 	Shift + Menu
Search	 + 	Shift + TV/R
Contrast+	 + 	Shift + Ch +
Contrast-	 + 	Shift + Ch -
On Pip	 + 	Shift + 1
Swap	 + 	Shift + 2
Rotate Pip	 + 	Shift + 3
Surround	 + 	Shift + Red
Nicam/Mono	 + 	Shift + Green
Level L	 + 	Shift + Yellow



Original	Recharge	Original	Recharge
Level R/Woofers	 Shift + Blue		

