



Original	Rechange
 Disc 1/Input Sel	 Shift + 1
 Disc 2/Tv Sel/Title	 Shift + 2
 Disc 3/Quit	 Shift + 3
 Power	 Power
 1	 1
 2	 2
 3	 3
 Play/Pause CD	 Play / Slow
 4	 4
 5	 5
 6	 6
 Tuner/Band	 TV/Radio /
 7	 7
 8	 8
 9	 9
 <> Tape	 Shift + 5
 0	 0

Original	Rechange
 +10	 Guide / EPG / -/--
 Menu	 Menu / Home
 Video/6 ch IN	 AV / Input / RDS
 Up/Disc Skip	 Up
 Left/ <<	 Left
 Right/ >>	 Right
 Down/Back	 Down
 Set/Return	 Setup / OPT /
 Enter	 OK
 << Tuning	 << / Tune-
 Tuning >>	 >> / Tune+
 Stop/Auto	 Stop / Hold
 PTY/Time Disp.	 D.Menu / Top
 RDS Disp./Play	 Display / Media
 LSTN ML/Pause	 Pause / Step / Freeze
 Timer	 Sleep / Timer
 Text Disp./Repeat/CH-	 Text / Goto





Original		Rechange		Original		Rechange	
	Random/CH+		Blue / Prime Video / Random				
	Mute		Mute / Dimmer				
	Volume-		Vol-				
	Volume+		Vol+				

