






 







 

 

 

 











 
 


 





 



 



 

 

 
















Original	Rechange	Original	Rechange
 Power	 Power	 Right	 Right
 Mute	 Mute	 Down	 Down
 1	 1	 Left	 Left
 2	 2	 OK	 Ok
 3	 3	 Exit	 Exit
 4	 4	 Display	 Info
 5	 5	 Vol +	 Vol +
 6	 6	 Vol -	 Vol -
 7	 7	 CH +	 Ch +
 8	 8	 CH -	 Ch -
 9	 9	 Sound	 Dual
 0	 0	 PIC	 Shift + Format
 ASPECT	 Format	 NICAM	 Media
 P.C.	 Pre Ch	 SLEEP	 Sleep
 MENU	 Menu	 TV	 Smart
 SOURCE	 Shift + AV	 AV	 AV
 Up	 Up	 HDMI	 Shift + Media

Original	Rechange	Original	Rechange
 Power	 Power	 Right	 Right
 Mute	 Mute	 Down	 Down
 1	 1	 Left	 Left
 2	 2	 OK	 Ok
 3	 3	 Exit	 Exit
 4	 4	 Display	 Info
 5	 5	 Vol +	 Vol +
 6	 6	 Vol -	 Vol -
 7	 7	 CH +	 Ch +
 8	 8	 CH -	 Ch -
 9	 9	 Sound	 Dual
 0	 0	 PIC	 Shift + Format
 ASPECT	 Format	 NICAM	 Media
 P.C.	 Pre Ch	 SLEEP	 Sleep
 MENU	 Menu	 TV	 Smart
 SOURCE	 Shift + AV	 AV	 AV
 Up	 Up	 HDMI	 Shift + Media





Original		Recharge	
	SCART1		Subt
	Y.PB.PR		Shift + Subt
	RECALL		Back
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Reveal		Play
	Hold		Pause
	List		List
	Index		Stop
	Subpage		Rec
	Size		3D
	Auto		Guide
	Text		Text

Original		Recharge	

