



Original	Rechange
Power	Power
Mute	Mute
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Tv/Radio	TV/R
←PR	Back
EPG	Guide
Menu	Menu
Info	Info

Original	Rechange
Exit	Exit
Up/PR+	Up
Down/PR-	Down
OK/List	Ok
Right	Right
Left	Left
Vol+	Vol +
Vol-	Vol -
↑	Ch +
↓	Ch -
Pause	Pause
[+]	3D
FAV	Pre Ch
UHF	Smart
PAL/NTSC	Format
TV/AV	AV
Red	Red





Original		Recharge		Original		Recharge	
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Audio		Dual				
	TXT		Text				
	[...]		Subt				
	Audio L/R	 + 	Shift + Dual				

