 


 



 
 


 
 


 
 



 




 

 







 
 
 





 











 

 

 



 



 

 


 






 





 

 

 













Original		Rechange		Original		Rechange	
	Power		Power		1		1
	Source		AV		2		2
	P+		Ch +		3		3
	P-		Ch -		4		4
	Vol+		Vol +		5		5
	Vol-		Vol -		6		6
	I- /Audio		Dual		7		7
	Mute		Mute		8		8
	OK		Ok		9		9
	Up		Up		0/10		0
	Down		Down		List/+10		List
	Right		Right		Back/Program		Back
	Left		Left		Tv/Radio		TV/R
	Text		Text		FAV		Pre Ch
	Sleep		Sleep		EPG		Guide
	Tv Menu		Menu		Setup		Options
	Exit		Exit		DVD Menu		D. Menu





	Original	Rechange		Original	Rechange
	Repeat	 + 	Shift + Text		>>
	S.Mode	 + 	Shift + Dual		<<
	P.Mode		Format		<<
	Info		Info		>>
	Zoom/Size	 + 	Shift + Eject		 + 
	Subtitle		Subt		 + 
	D.Dis/Reveal		Smart		 + 
	Slow/Cancel		3D		
	A-B/Index		Media		
	Red		Red		
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		
	Play		Play		
	Stop/Mix		Stop		
	Open/Close/Subp		Eject		
	Pause/Hold		Pause		

