



Original	Recharge
Tuner	Shift + 6
Power	Power
Open / Close	Eject / Surround
Aux	Shift + 7
DVD	Shift + 2
USB	Shift + 8
Dimmer	Shift + Mute / Dimmer
Prog / Memo	TV/Radio /
Audio	Audio / Lang I/II
Sound	Sound / Title
S-Title	Subtitle / EQ
Clear	Exit / Cancel / Clear
Repeat	Green / APP / Repeat
Repeat A-B	Yellow / YouTube / Repeat
Marker	Fav / Marker / PC
Search	Red / Netflix / Search
<< / Scan -	<< / Tune-

Original	Recharge
I<< / Skip -	I<< / Preset-
>>I / Skip +	>>I / Preset+
>> / Scan +	>> / Tune+
Title	Shift + Sound / Title
Stop	Stop / Hold
Play	Play / Slow
Pause / Step	Pause / Step / Freeze
Zoom	Zoom / Size
Setup	Setup / OPT /
Display	Display / Media
Menu	Menu / Home
Up / Preset +	Up
Return	Back / Return
Left / Tun. -	Left
Enter	OK
Right / Tun. +	Right
Down / Preset -	Down





Original	Rechange
VSM	Smart / List
Sleep	Sleep / Timer
Vol +	Vol+
XTS Pro	Text / Goto
Mute	Mute / Dimmer
Vol -	Vol-
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
PTY / HDMI	Picture / Format
0	0

Original	Rechange
RDS / Resol.	Info / Angle
TV Power	Shift + Power
TV PR +	CH+ / Page+
TV Vol +	Shift + Vol+
TV Input	AV / Input / RDS
TV PR -	CH- / Page-
TV Vol -	Shift + Vol-

