



 









Original	Rechange	Original	Rechange
Power		Power	Power
Recent		Shift + Guide / EPG / -/-	
TV / PC		Shift + Fav / Marker / PC	
My APPS		Display / Media	
AV Mode		Shift + AV / Input / RDS	
T.Opt		Shift + Setup / OPT / Tools	
Q.View		Eject / Surround	
Energy Saving		Sleep / Timer	
Live Zoom		Shift + Zoom /	
Live Menu		Shift + Menu /	
3D		Zoom / Size	
AD / PIP		Sound / Title	
>>		>> / Preset+	
<<		<< / Preset-	
Home / Smart		Menu / Home	
Stop / Live TV		Stop / Hold	
Blue		Blue / Prime Video / Random	

Original	Rechange	Original	Rechange
Yellow		Yellow / YouTube / Repeat	
Green		Green / APP / Repeat	
Red		Red / Netflix / Search	
AD		Audio / Lang I/II	
Search		Shift + Red / Netflix /	
App		Shift + Green / APP /	
TV / Radio		TV/Radio /	
Guide		Guide / EPG / -/-	
Info		Info / Angle	
Input		AV / Input / RDS	
List		Smart / List	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	





Original	Rechange	
7		7
8		8
9		9
0		0
OK		OK
Up		Up
Down		Down
Right		Right
Left		Left
Back		Back / Return
Vol +		Vol+
Vol -		Vol-
Mute		Mute / Dimmer
P +		CH+ / Page+
P -		CH- / Page-
Ratio		Picture / Format
Q.Menu		D.Menu / Top

Original	Rechange	
Subtitle		Subtitle / EQ
Settings		Setup / OPT /
>>		>> / Tune+
Play		Play / Slow
<<		<< / Tune-
Rec		Rec / Rec Mode
Pause		Pause / Step / Freeze
Text		Text / Goto
FAV		Fav / Marker / PC
Exit		Exit / Cancel / Clear

