


 



 
 



Original	Recharge
Power	Power
Power Tv	Shift + Power
DVD	Shift + 2
VCR	Shift + 4
Eject/Open-Close	Eject / Surround
AV/Input Tv	Shift + AV / Input / RDS
1	1
2	2
3	3
PR/CH+ Tv	Shift + CH+ /
4	4
5	5
6	6
PR/CH- Tv	Shift + CH- /
7	7
8	8
9	9

Original	Recharge
Vol+ Tv	Vol+
Clear	Exit / Cancel / Clear
0	0
AV/Input	AV / Input / RDS
Vol- Tv	Vol-
<<	<< / Tune-
>>	>> / Tune+
I<<	I<< / Preset-
>>I	>>I / Preset+
Pause/Step	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
Home	Menu / Home
Up	Up
PR/CH/TRK+	CH+ / Page+
Disc Menu/List	D.Menu / Top
Disc Menu/List	Smart / List





Original	Recharge	Original	Recharge
 Left	 Left	 Search	 Red / Netflix / Search
 Enter	 OK	 Thumbnail	 Picture / Format
 Right	 Right	 CHP.ADD	 Text / Goto
 Display	 Display / Media	 TV/VCR	 TV/Radio /
 PR/CH/TRK-	 CH- / Page-	 Timeshift	 Shift + Sleep / Timer
 Down	 Down	 Showview	 Guide / EPG / -/--
 Return	 Back / Return		
 O)/Audio	 Audio / Lang I/II		
 [...] / Subtitle	 Subtitle / EQ		
 Zoom	 Zoom / Size		
 I.Skip	 Sleep / Timer		
 Rec	 Rec / Rec Mode		
 Rec Mode	 Shift + Rec / Rec Mode		
 Dubbing	 Info / Angle		
 Title	 Sound / Title		
 Play Mode	 Setup / OPT /		
 Marker	 Fav / Marker / PC		

