








 





 


 
 
 
 

 

 
 


 




 

 

 









 





 

 




 
 
 


 









Original	Recharge	Original	Recharge
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	M		Menu
	E		Exit
	i		Info
	Rec		Rec
	Pause		Pause
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	<<		<<
	Stop		Stop
	Play		Play
	>>		>>
	Mute/Timer		Mute
	[ ]		Subt
	T		TV/R
	Guide/000		Guide
	V≡/LP		Format






 


 


 



 


 







 



 



 

 







 




 
 


 


 
 

 
 











Original		Recharge		Original		Recharge	
	[ */ ]/SV		3D				
	Sound		Dual				

 
 

 




Original	Recharge	Original	Recharge
 Power	 Power	 M	 Menu
 [ ]	 Subt	 E	 Exit
 Mute/Timer	 Mute	 T	 TV/R
 Guide/000	 Guide	 i	 Info
 V= / LP	 Format	 OK	 Ok
 [ * ] / SV	 3D	 Up	 Up
 Sound	 Dual	 Down	 Down
 1	 1	 Right	 Right
 2	 2	 Left	 Left
 3	 3	 Red	 Red
 4	 4	 Green	 Green
 5	 5	 Yellow	 Yellow
 6	 6	 Blue	 Blue
 7	 7	 <<	 <<
 8	 8	 Stop	 Stop
 9	 9	 Play	 Play
 0	 0	 >>	 >>






 


 


 


 
 


 







 



 




 
 







 




 



 

 
 
 
 

 











Original		Recharge		Original		Recharge	
	Pause		Pause				
	Rec		Rec				





Original	Recharge	Original	Recharge
 Power	 Power	 M	 Menu
 [ ]	 Subt	 E	 Exit
 Mute/Timer	 Mute	 T	 TV/R
 Guide/000	 Guide	 OK	 Ok
 V= / LP	 Format	 Up	 Up
 [ * ] / SV	 3D	 Down	 Down
 Sound	 Dual	 Right	 Right
 1	 1	 Left	 Left
 2	 2	 Red	 Red
 3	 3	 Green	 Green
 4	 4	 Yellow	 Yellow
 5	 5	 Blue	 Blue
 6	 6	 <<	 <<
 7	 7	 Stop	 Stop
 8	 8	 Play	 Play
 9	 9	 >>	 >>
 0	 0	 Pause	 Pause

