





 

 












 



 

 











Original	Recharge
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 ASPECT	 Format
 P.C.	 Pre Ch
 MENU	 Menu
 SOURCE	 Shift + AV
 Up	 Up

Original	Recharge
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 Ok
 Exit	 Exit
 Display	 Info
 Vol +	 Vol +
 Vol -	 Vol -
 CH +	 Ch +
 CH -	 Ch -
 Sound	 Dual
 PIC	 Shift + Format
 NICAM	 Media
 SLEEP	 Sleep
 TV	 Smart
 AV	 AV
 HDMI	 Shift + Media





Original	Recharge
SCART1	AD SUBT Subt
Y.Pb.Pr	SHIFT + AD SUBT Shift + Subt
RECALL	RETURN BACK Back
Red	A Red
Green	B Green
Yellow	C Yellow
Blue	D Blue
REVEAL	PLAY MODE Play
HOLD	Pause
LIST	DISC NAV LIST List
INDEX	Stop
SUBPAGE	REC MODE Rec
SIZE	ECO 3D 3D
AUTO	GUIDE Guide
TEXT	REPEAT TEXT Text

Original	Recharge

