



Original	Recharge	Original	Recharge
 Power	 Power	 9	 9
 Sleep	 Sleep / Timer	 EPG	 Guide / EPG / -/-
 Screen	 Picture / Format	 0	 0
 Presets	 Setup / OPT /	 Swap	 Fav / Marker / PC
 TV/Radio /	 TV/Radio /	 Photo/Music/Movi	 D.Menu / Top
 FAV	 Shift + Fav / Marker / PC	 World	 Smart / List
 Lang	 Audio / Lang I/II	 Source	 AV / Input / RDS
 Subtitle	 Subtitle / EQ	 Menu	 Menu / Home
 TXT	 Text / Goto	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 OK	 OK
 3	 3	 Right	 Right
 4	 4	 Down	 Down
 5	 5	 C	 Exit / Cancel / Clear
 6	 6	 Disp.	 Display / Media
 7	 7	 Search Mode	 Shift + Red / Netflix /
 8	 8	 Return	 Back / Return





Original		Recharge		Original		Recharge	
	CH+		CH+ / Page+		Yellow/Root		Yellow / YouTube / Repeat
	Info		Info / Angle		Blue/Title		Blue / Prime Video / Random
	Vol+		Vol+				
	CH-		CH- / Page-				
	Mute		Mute / Dimmer				
	Vol-		Vol-				
	Rec		Rec / Rec Mode				
	Pause		Pause / Step / Freeze				
	I<<		I<< / Preset-				
	>>I		>>I / Preset+				
	<<		<< / Tune-				
	Play		Play / Slow				
	Stop		Stop / Hold				
	>>		>> / Tune+				
	Red/↑/Zoom		Red / Netflix / Search				
	Red/↑/Zoom		Zoom / Size				
	Green/↓/Repeat		Green / APP / Repeat				

