



















































 









 









 






Original		Recharge		Original		Recharge	
	Power		Power		Func		D.Menu / Top
	Mute		Mute / Dimmer		A / V+		AV / Input / RDS
	1		1		EPG		Guide / EPG / -/--
	2		2		Option		Setup / OPT /
	3		3		Vol -		Vol-
	4		4		Vol +		Vol+
	5		5		IPTV		Sound / Title
	6		6		FAV / SAT		Fav / Marker / PC
	7		7		Green		Green / APP / Repeat
	8		8		Yellow		Yellow / YouTube / Repeat
	9		9		Red		Red / Netflix / Search
	Info		Info / Angle		Blue		Blue / Prime Video / Random
	0		0		Up		Up
	Recall		Back / Return		Left		Left
	TV / Radio		TV/Radio /		OK		OK
	Sub.T / TXT		Subtitle / EQ		Right		Right
	Sub.T / TXT		Text / Goto		Menu		Menu / Home





Original	Recharge
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Sleep	 Sleep / Timer
 PVR List	 Smart / List
 PVR Info	 Display / Media
 T.Shift	 Eject / Surround
 <<	 << / Tune-
 >>	 >> / Tune+
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 Jump	 Picture / Format
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode

Original	Recharge

