










 





 

 







 







 



 

 







 











 







 











Original	Rechange	Original	Rechange
 Power	 Power	 Exit	 Exit
 Mute	 Mute	 PR+	 Ch +
 1	 1	 PR-	 Ch -
 2	 2	 Vol+	 Vol +
 3	 3	 Vol+	 Right
 4	 4	 Vol-	 Vol -
 5	 5	 Vol-	 Left
 6	 6	 OK/List	 Ok
 7	 7	 ↑	 Up
 8	 8	 ↓	 Down
 9	 9	 Pause	 Pause
 0	 0	 Red/Find	 Red
 Tv/Radio	 TV/R	 Green/Zoom	 Green
 ←PR	 Back	 Yellow/TXT	 Yellow
 EPG	 Guide	 Blue/Audio L/R	 Blue
 Menu	 Menu	 SAT	 Media
 FAV	 Pre Ch	 Tv/AV	 AV

Original	Rechange	Original	Rechange
 MUTE	 MUTE	 SHIFT	
 TV	 DVD	 SAT	 AUX
 PLAY MODE	 REC MODE	