


 

 



 


 
 






 




 


 



 



 


 



 

 

 




 






 



 




Original		Recharge		Original		Recharge	
	Power		Power		Sleep		Sleep
	Mute		Mute		CH +		Ch +
	1		1		CH -		Ch -
	2		2		Menu		Menu
	3		3		Up		Up
	4		4		Down		Down
	5		5		Right		Right
	6		6		Left		Left
	7		7		OK		Ok
	8		8		Exit		Exit
	9		9		Mode		Media
	0		0		TV / Radio		TV/R
	Info		Info		Freeze		Pause
	Back		Back		Subtitle		Subt
	Vol +		Vol +		Text		Text
	Vol -		Vol -		P.Mode		Shift + Format
	Nicam / A2		3D		S.Mode		Dual





Original	Rechange	Original	Rechange
MIX	Mix	HOME SMART	Smart
HOLD	Hold	[Stop]	Stop
INDEX	Index	SHIFT + DISPLAY INFO	Shift + Info
SUBPAGE	Subpage	TIMER AV	AV
REVEAL	Reveal	E-MANUAL D.MENU	D. Menu
[Red]	Red	A	Red
[Green]	Green	B	Green
SIZE	Size	PICTURE FORMAT	Format
[Yellow]	Yellow	C	Yellow
[Blue]	Blue	D	Blue
ZOOM	Zoom	ZOOM [Up]	Eject
FAV-CH	Fav-CH	FAV PRE-CH	Pre Ch
EPG	EPG	-/-- GUIDE	Guide
CH-LIST	CH List	DISC NAV LIST	List

